


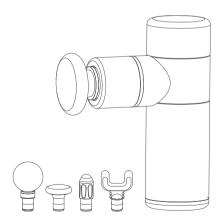

Vibration Percussion Device

Instructions (V2.4) Model: K1



Overview

Main Body



Массадь Ньад



Spherical Head

Relax soft tissues and sensitive muscles



Flat Head

Massage flat major muscle groups on the back



Cone Head

Percuss deep tissues like meridians and acupoint, etc.



U-shaped Head

Massage neck and tendon

Start to Use

Install/ Replace Massage Head

Install a massage head into the hole in front of the device according to your need.



Installation Rendering:



Power ON/OFF

Long press the power button to power ON/OFF.

W Use it after powering on for 5s.! Do not use it while charging.

Selecting Gears

Single tap power button to select gears after powering on.

Cycle among first gear/ second gear/ third gear/ fourth gear orderly.



Indicator

Battery Indicator

Dattery marcator			
Light	Status	Description	
Red		Charging while power OFF	
Green		Charge complete	
Green		Battery level ≤10%	
Green		Battery level 11%-30%	
Green		Battery level 31%-60%	
Green		Battery level 61%-100%	

Gear Indicator

Light	Status	Description
Blue	•000	First gear
Blue	••00	Second gear
Blue	•••	Third gear
Blue	• • • •	Fourth gear

Charging

! Do not use it while charging



Specifications

Product name:

KiCA Vibration Percussion Device

Model
Motor Rated Power
Rated Input
Battery Capacity
Theoretical Battery Life
Weight (Reference value)

30W 5V == 2A 2000mAh About 11 Hours 485g (Main Body) 91x137x44mm

K1

List











Size





x1 Manual

Main Body

Head

Flat Head

Cone Head

du

U-snaped Head

USB Cable

Storage Bag

Manu

Contraindications

- (1) Cancers.
- (2) Metal bone anastomosis (do not use the device directly in the fracture area).
- (3) Osteoporosis.
- (4) Vein thrombosis and pulsation.
- (5) Hypertension.
- (6) Pregnancy (do not use the device in close proximity to the abdomen).
- (7) Kidney stones (do not use the device near the kidneys).
- (8) Varicose veins.
- (9) Acute inflammation.
- (10) Do not massage one episode for more than 4-5 minutes.
- $\left(11\right)$ Do not massage the bony area (patella, tibia, metatarsal bones, etc.)
- (12) Do not massage directly into the spine.
- (13) Do not massage the cervical segment.
- (14) Do not massage facial muscles.

Disclaimer

Thanks for using the product. The information in this document affects your safety and your legal rights and responsibilities. Read the entire document carefully to ensure proper configuration before use, Failure to read and follow instructions and warnings in this document may result in serious injury to yourself or others, or damage to your products or damage to other objects in the vicinity.

By using this product, you hereby signify that you have read this disclaimer and warning carefully and that you understand and agree to abide by the terms and conditions herein. You agree that you are solely responsible for your own conduct while using this product, and for any consequences thereof. You agree to use this product only for purposes that are proper and in accordance with all applicable laws, rules, and regulations, and all terms, preactices, policies and guideline Our company has made and may make available. Our company accepts no liability for damage, injury or any legal responsibility incurred directly or indirectly from the use of product. Our company will not provide any service for any product obtained from abnormal channels.

Safety Instruction

- This device is not recommended to directly massage the skin to avoid to do harm to the skin. Customer should massage body after wearing dry clothes or placing a clean and dry towel on massage part, gently press and move the device.
- High speed and high pressure massaging can only be used to soft tissues without feeling pain or maladjustments. Cannot massage head and any skeletal sites with high speed and high pressure.
- Massage the same part of body with high speed and high pressure for a long time will cause bruises. Please stop using immediately after feeling pain or maladjustments.
- 4. Please keep your fingers, hair or any other body hair away from the extendable part of the device to prevent pinching and clipping.
- 5. Do not discard or misuse this device.
- 6. Do not modify this device by yourself without permission.
- 7. Do not operate or charge the device when nobody was around.
- 8. This device is for adults only.
- 9. People with contraindicated symptoms should use this device with doctor's permission.

Notice

- 1. Make sure massage head is not blocked by external force when device is power on. If it is blocked, it will pause for a while and try to restart.
- 2. DO NOT contact the product with water or other liquid for the Percussion Massage Device is not waterproof.
- DO NOT disassemble the product except marked detachable. It need send to after-sales or authorized service center to fix it if you accidently disassemble it and cause abnormal work. The relevant costs are borne by user.
- Prolonged continuous operation may cause the motor surface temperature to rise, please operate carefully.
- 5. DO NOT drop or strike the product. If the product is abnormal, contact After-sales support.

Storage and Maintenance

- 1. Keep the product out of the reach of children and pets.
- DO NOT leave the product near heat sources such as a furnace or heater. DO NOT leave the product inside of a vehicle on hot days.
- 3. Please storage the product in dry environment.
- 4. DO NOT overcharge or overuse the battery, otherwise it will cause damage to the battery core.
- 5. Never use the product when the temperature is too high or too low.



This document is subject to change without notice. If you have any questions about this document, please contact us by the following ways.

Manufactured by: Guilin Feiyu Technology Incorporated Company Website: www.kica-tech.com | E-mail: service@kica-tech.com Tel: +86 773-2320865